


Topology

Demonstrating DNS and Web Server using Packet Server.

Topology

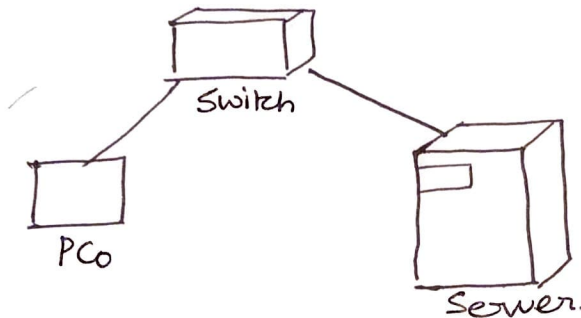

Procedure

- Connect the PC / switch / server using copper straight through cable.
- Set the IP address of the PC to (10.0.0.1)
- Set the IP address of the server to (10.0.0.2)
- Hence 10.0.0.2 will be the DNS server of our connection.
- In services click the DNS section & switch on the DNS server and also assign www.bms.com to the server address 10.0.0.2. Save the config.
- For the PCo add 10.0.0.2 as the DNS Server.
- Check all the connections.